

3" on center PVC slatwall

MegaWall 3" on center plastic slatwall is a great alternative to MDF slatwall. For installation directly onto studs review following instructions.


1. Start at the top of the installation as seen in figure A. Using drywall screws, screw into each stud. Use screws on each stud and between slats.
2. Once 1st slat profile is secure place second profile snugly underneath and secure as shown in figure B.
3. Continue process until finished.



Profile Top



Profile interlock

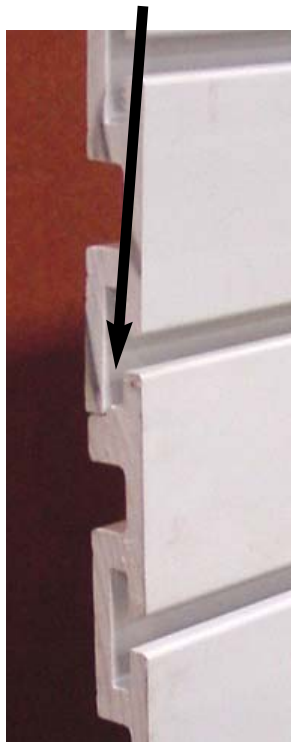

Profile Bottom