


Steel Trim Installation Instructions

Trim installation method is left to the discretion of the installer. Options include screws, pop-rivets and clear silicone adhesive. Tape may be used to temporarily secure trim while adhesive dries. Use the correct trim for the correct location.

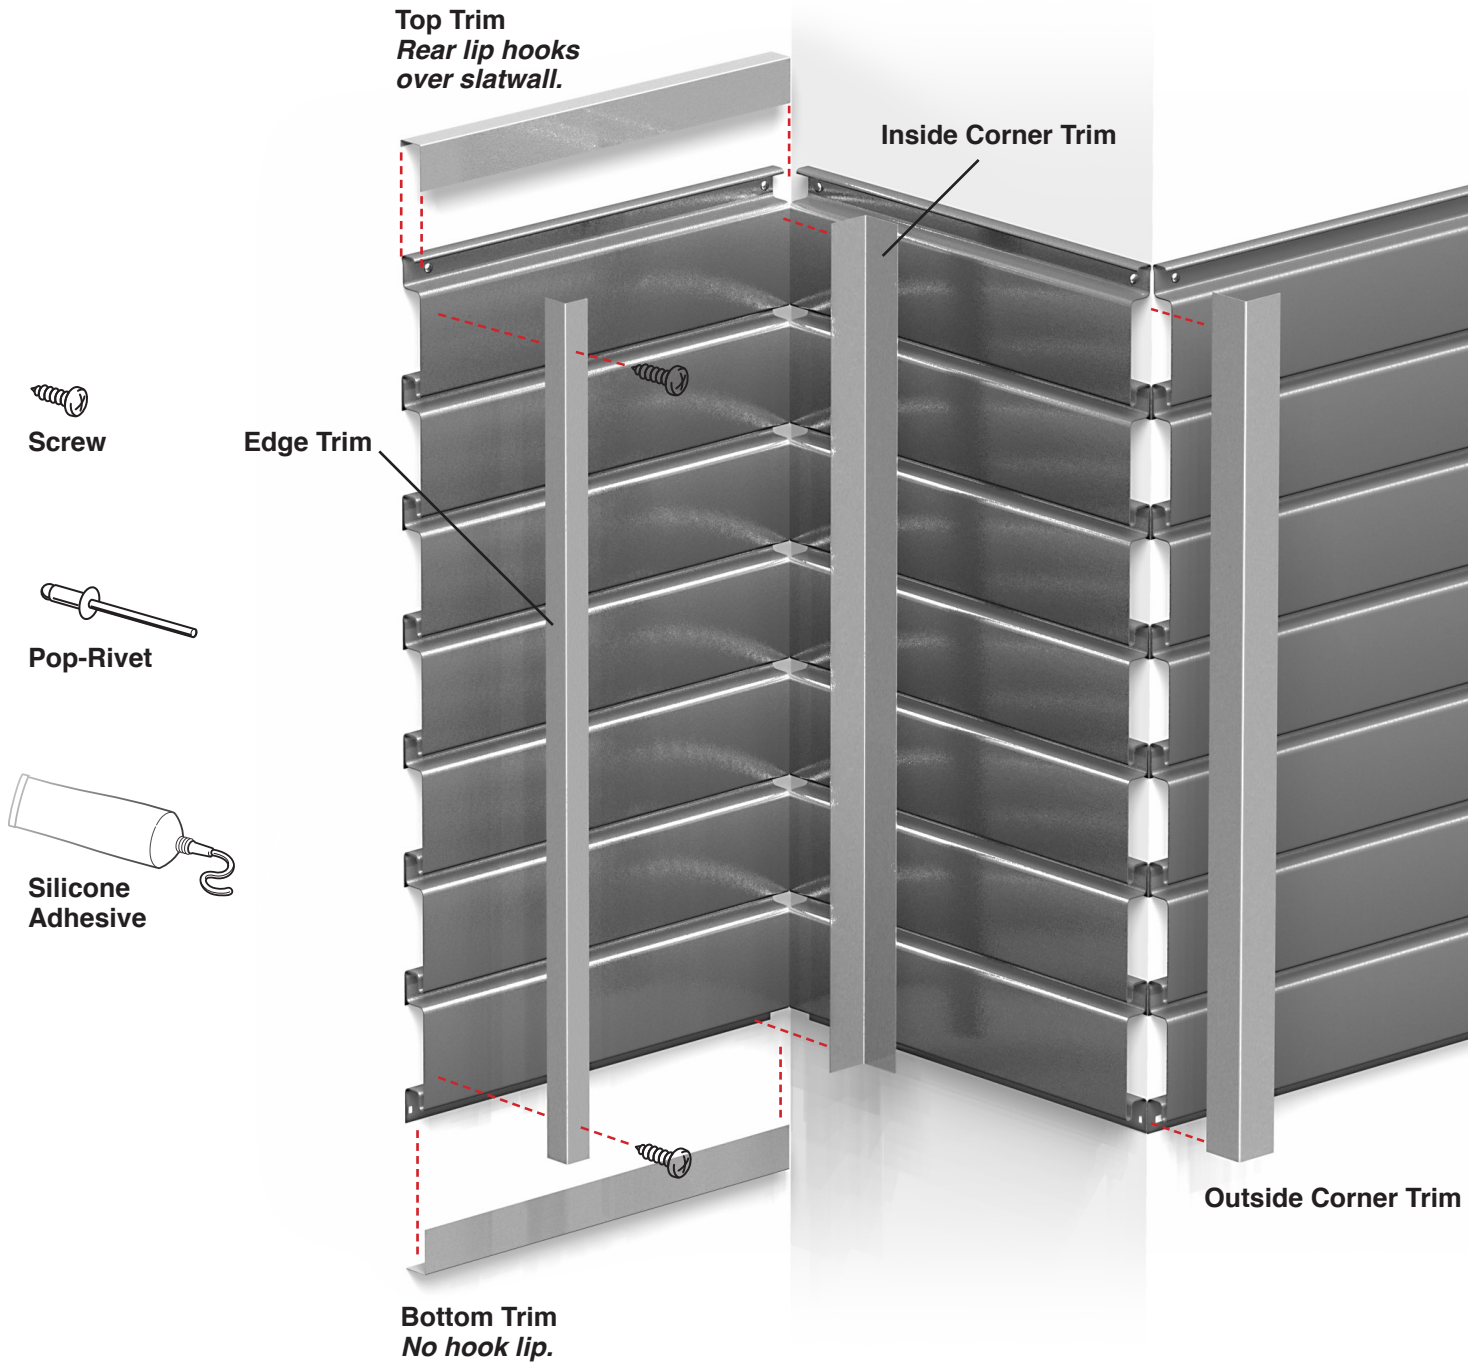

MEGAWALL